




IGNITION SWITCH

COMPONENTS

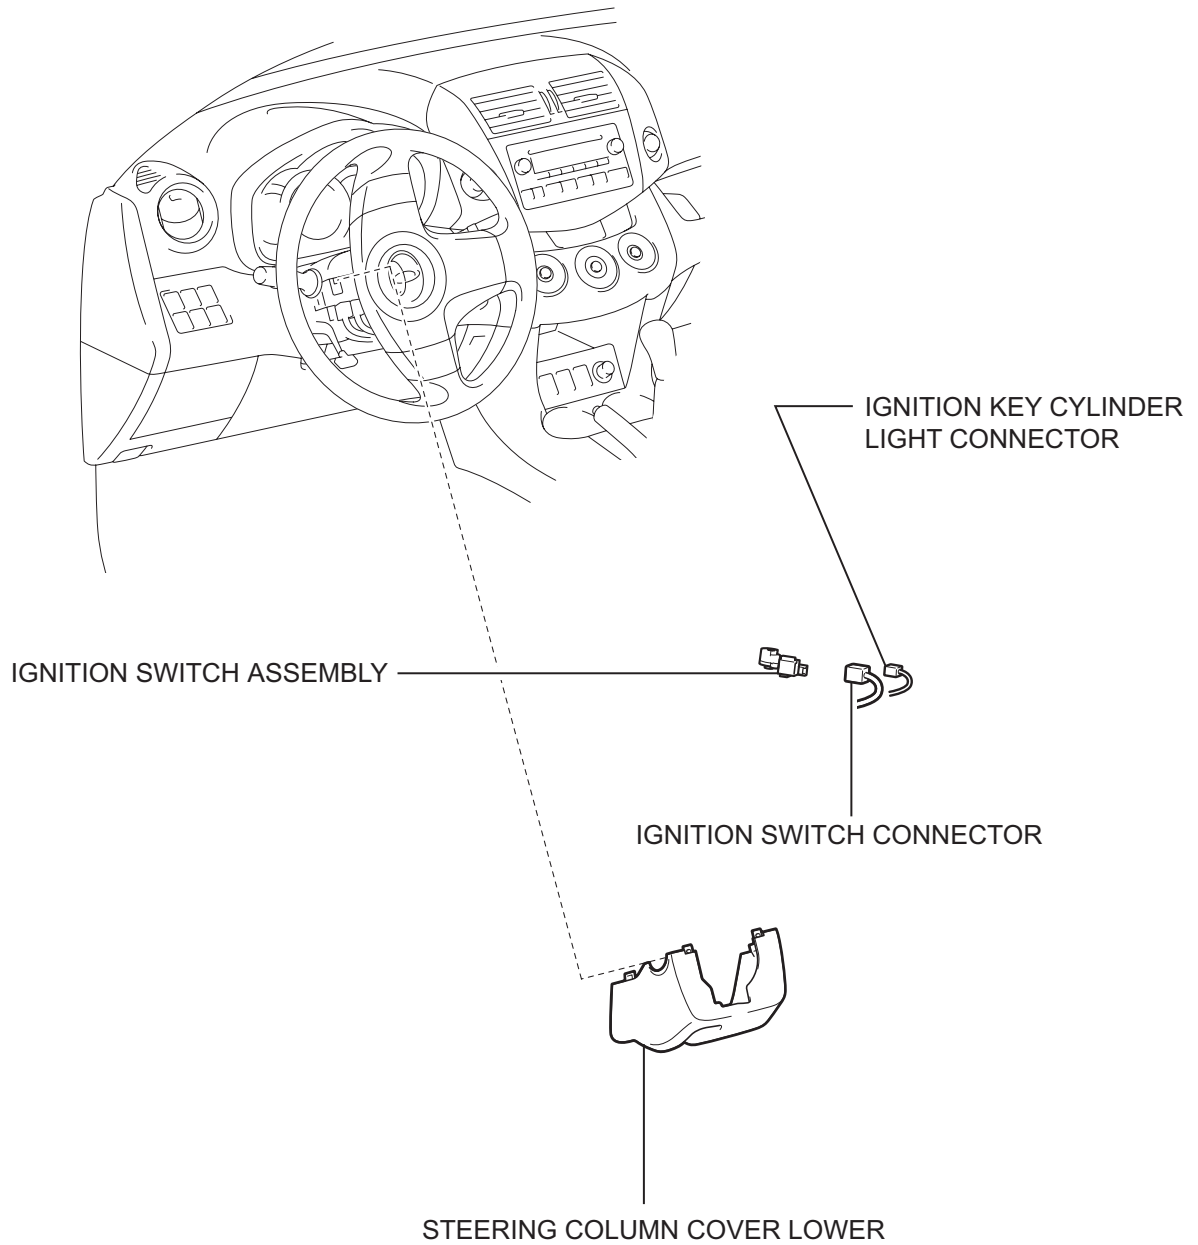


REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY
TERMINAL
- CAUTION:
Wait at least 90 seconds after disconnecting the
cable from the negative (-) battery terminal to
prevent airbag and seat belt pretensioner activation.
2. REMOVE STEERING COLUMN COVER LOWER
- (a) Remove the steering column cover lower (see page
SR-12).
3. REMOVE IGNITION SWITCH ASSEMBLY
- (a) Disconnect the ignition switch connector.

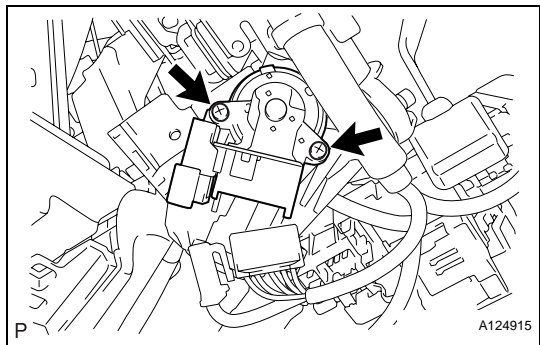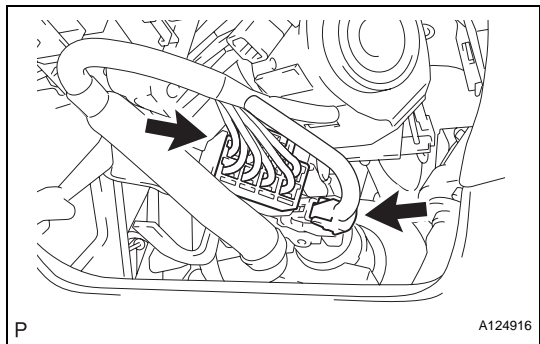

- (b) Disconnect the ignition key cylinder light connector.
- (c) Remove the 2 screws and ignition switch.

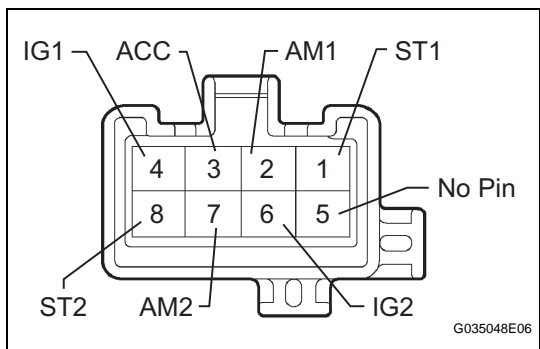


INSPECTION

1. INSPECT IGNITION SWITCH ASSEMBLY
- (a) Measure the resistance of the switch.
- Standard resistance

Tester Connection	Switch Condition	Specified Condition
-	LOCK	10 kΩ or higher
2 (AM1) - 3 (ACC)	ACC	Below 1 Ω
2 (AM1) - 3 (ACC) 2 (AM1) - 4 (IG1) 6 (IG2) - 7 (AM2)	ON	Below 1 Ω
1 (ST1) - 2 (AM1) 1 (ST1) - 4 (IG1) 6 (IG2) - 7 (AM2) 6 (IG2) - 8 (ST2)	START	Below 1 Ω

If the result is not as specified, replace the switch assembly.

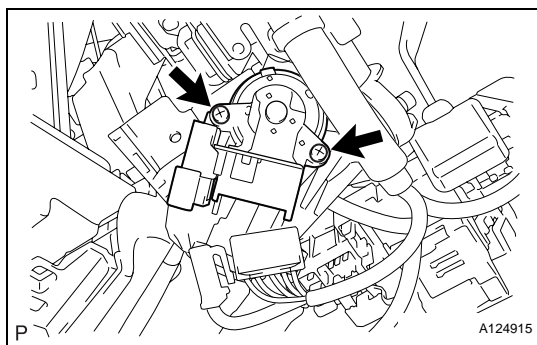

INSTALLATION

1. INSTALL IGNITION SWITCH ASSEMBLY

- (a) Install the ignition switch with the 2 screws.

(b) Connect the ignition key cylinder light connector.

(c) Connect the ignition switch connector.

2. INSTALL STEERING COLUMN COVER LOWER

- (a) Install the steering column cover lower (see page [SR-20](#)).

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

